


Einsatz -

04 29 03 051 00 90

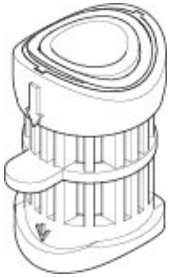



Einsatz -

04 29 03 051 00 90



Einsatz -

04 29 03 051 00 90



Einsatz -

04 29 03 051 00 90



Einsatz -

04 29 03 051 00 90

Ersatzteilstückliste