


Befestigung -

09 16 01 030 90

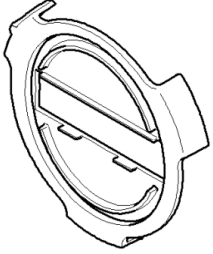



Befestigung -

09 16 01 030 90



Befestigung -

09 16 01 030 90



Befestigung -

09 16 01 030 90



Befestigung -

09 16 01 030 90

Ersatzteilstückliste